

# Lindab Plexus

Active chilled beam Installation instructions



### Plexus

### 1. Content and symbols

1. Cont	ent and symbols	
1.1	Content	.2
1.2	Symbols	.3
2. Cont	rol of delivery	
2.1	Before starting	.3
2.2	Safe operation	.3
2.3	Receipt of goods	.3
2.4	Unloading of goods	
2.5	Handling / Carrying	
2.6	Tools	
2.7	Installation	
2.8	Where to find additional instructions	•
	or technical documentation	. 4
2.9	Cleaning after assembly/before commissioning	 4
2.10	Packing, unpacking guideline	 5
2.11	Product labelling	
2.12	Order code	
2.12	Order code examples	
2.13	Label	
2.14	Contents of order	
2.15	Plus features	
	Inlet faceplates	
	Outlet front grilles	
	Integrated valves	
	Thermoelectric actuators	
	Integrated Regula components	
	Airguides	
	Heating	
2.17	Accessories	
2.17.1	Threaded rod kit (Hangers)	
	Flexible hoses	
	Transformer	
2.17.4	Tectite fittings	.8
		_
	uct specification	.9
3.1	Product description	
3.2	Dimensions	
3.3	General structure	
3.4	Material data	
3.5	Environmental Declarations	
3.6	Pressure class	
3.7	Water quality	10
3.8	Air quality	
3.9	Capacity test	10
4. Conr	nections	11
4.1	Water connections	11
4.1.1	Before installation	11
4.1.2	Push on valve	12
4.1.3	Compression fitting	12
4.1.4	Flexible hoses	12
4.1.5	Possible connections water cooling	
	(2-pipe, standard)	13
4.1.6	Possible connections water cooling and	_
0	heating (4-pipe, standard)	14
4.1.7	Water pipe dimensions and placement	
4.2.	Air connections	
4.2.1	Air connection installation	
4.2.2	Possible connections supply air	
4.2.2	i ossible collifections supply all	10

	Possible connections extract air	10
4.3	Possible com'bination of connections	16
4.4	Electrical connections	17
4.4.1	Regula components on the beam	17
4.4.2	Example 1:	
	Wiring scheme with Regula Connect multi	18
4.4.3	Example 2:	
	Wiring scheme with Regula Connect basic	18
4.4.4	Regula Connect on the beam	19
4.4.5	Regula Secura on the beam	19
4.4.6	Valves and Actuators on the beam	
	(See 2.16.3 and 2.16.4)	19
4.4.7	Regula Combi on/with the beam	19
4.4.8	Thermoelectric actuators (See 2.16.4)	19
5. Insta	ıllation of product	20
5.1	Handling of product	
5.2	Adaption to ceiling systems	
5.2.1	Ceiling systems	
5.2.2	Adaption to ceiling system	
5.3	General installation principles	
5.3.1	Recessed in suspended T-bar ceiling	
5.3.2	Exposed, sealed to the ceiling	
5.3.3	Exposed, free hanging	
5.3.4	Free hanging above perforated	20
0.0.1	or eggcrate ceiling	25
5.3.5	Recessed in suspended (permanent) ceiling	
5.3.6	Recessed in suspended (permanent) ceiling	0
0.0.0	without cover flanges	25
5.4	Preparation for installation on the product	
	The second secon	
5.5	Basics steps of installing the product	27
6. Adju	stment and commissioning	28
<b>6. Adju</b> 6.1	stment and commissioning Airflow and pressure	<b>28</b> 28
<b>6. Adju</b> 6.1 6.1.1	stment and commissioning  Airflow and pressure  Jet cone adjustment pins	<b>28</b> 28
<b>6. Adju</b> 6.1 6.1.1 6.1.2	stment and commissioning  Airflow and pressure  Jet cone adjustment pins  Finding values for JetCone pins	<b>28</b> 28
<b>6. Adju</b> 6.1 6.1.1	stment and commissioning	28 28 28
6. Adju 6.1 6.1.1 6.1.2 6.1.3	stment and commissioning	28 28 29
6. Adju 6.1 6.1.1 6.1.2 6.1.3	stment and commissioning	28 28 29
6. Adju 6.1 6.1.1 6.1.2 6.1.3	stment and commissioning	28 28 29 29
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3	stment and commissioning	28 28 29 29
6. Adju 6.1 6.1.1 6.1.2 6.1.3	stment and commissioning	28 28 29 29 30
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3	stment and commissioning	28 28 29 30 30
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1	stment and commissioning	28 29 29 30 30
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3	stment and commissioning	28 29 29 30 30 30
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4	stment and commissioning	282930303030
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5	stment and commissioning	28293030303030
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.4	stment and commissioning	2828293030303132
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.4 6.4.1	stment and commissioning	2828293030303030303030313232
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.4	stment and commissioning	2828293030303030303030313232
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.4 6.4.1 6.4.2	stment and commissioning	2829303030313232
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.4 6.4.1 6.4.2	stment and commissioning	2829303030313232323232
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.4 6.4.1 6.4.2 7. Main	stment and commissioning	2829303030313232333233
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.4 6.4.1 6.4.2 7. Main	stment and commissioning	282930303132323333333333
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.4 6.4.1 6.4.2 7. Main 7.1 7.2	stment and commissioning	2829303031323333333333333334
6. Adju 6.1 6.1.1 6.1.2 6.1.3 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.4 6.4.1 6.4.2 7. Main 7.1 7.2 7.3	stment and commissioning	2829303031323333333333333334



### Plexus

#### 1.2 Symbols





Heavy Load - 2 man job - It is recommended to use a "lift" for mounting.





### 2. Control of delivery

### 2.1 Before starting

Read through the entire installation instruction before commencing installation in order to determine which parts that needs to be performed and in what order to be done.

Lindab is a supplier of complete water products, but we offer also a wide range of accessories which suit perfectly to our water products simplifying your installation work, e.g. different type of hangers, Tektite-couplings, closing valves, thermostatic valves and actuators, flexible hoses, customized regulation components, customized cabeling and more. See also the separate document "Accessories".

Lindab will also provide you with a full ventilation system, with a wide range of Lindab Safe components. See also "Air Duct Systems".

### 2.2 Safe operation

Beware of sharp edges, especially of the coils. Always wear thin gloves and protective clothing.

All existing safety regulations must be observed when working with Lindab water products. Check the weights of the beams or the panels with the installation instruction before carrying.

### 2.3 Receipt of goods

Start by checking that the delivery is complete according to the order and that everything listed on the consignment note has been delivered.

Then carry out a review of the products and make sure that nothing was damaged during transportation. If you discover damage that has occurred during delivery, it must be notified immediately.

Lindab is not responsible for costs associated with the replacement of products that have been installed in any way other than shown in these installation instructions.

### 2.4 Unloading of goods

The beams and panels are normally delivered packed on wooden pallets. Lift the pallets carefully with a fork lift and place them on a dry and plain surface/ground. If the beams are delivered in single boxes, wooden blocks should be placed on the ground at one-metre intervals (or a pallet), before the boxes are been placed to store. Lindabs water products must be stored on a plane surface in a dry and well ventilated place, preferably indoors. If they have to be stored outdoors, protect them with a waterproof cover and store them protected from rain beneath a roof or other until they are fitted.

### 2.5 Handling / Carrying

The beam or panel must be handled with care, ensuring that it will not be scratched or bended during transportation, preparation and installation.

Always carry the beams or panels piecewise into the building. Keep the product in the package as long as you can.



Never use piping connections or edges to lift them, neither when you unpack them nor when you carry them towards the construction site.

Do not place the product directly on the floor. Use the protective corners from package or other clean means from package to place the product before installation.

Be careful if you must carry a long panel horizontally; if the panels are bended lengthwise, the profiles may be deformed and the piping could be loosen from the panel. When opening the box with a knife, be careful not to damage the product.


Each beam is equipped with protective film to avoid any damage during transportation and handling on building site. The film needs to be removed before commissioning the products.



### Plexus

#### 2.6 Tools

To install the beam, panel or facade unit, the following tools are required.

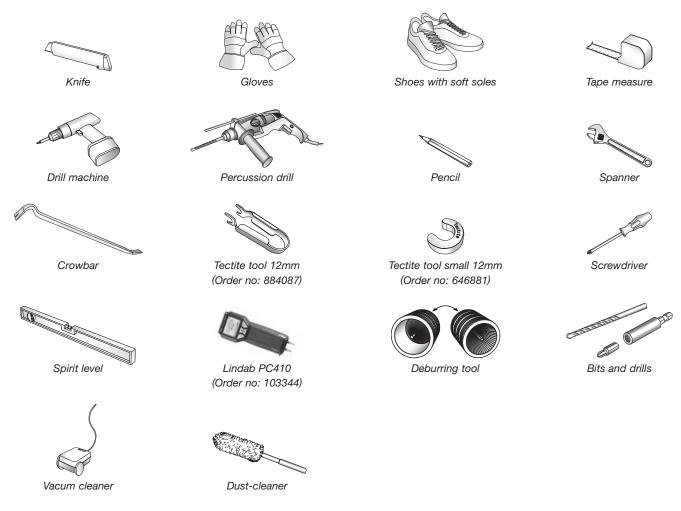

### 2.7 Installation

It is important to use the correct hangers and the recommended amount for all installation principles. Different possible installation principles are shown in the installation instruction and hangers from Lindab should be used to ensure, that they are intended for the purpose and are safe to use.

Lindab's water products can be ordered, to be adapted to a wide range of different ceiling systems, please check installation instruction to ensure best adaptation.

The Lindab water products should always be installed separately hanged up from the recessed ceiling. The weight of the product should not be covered by the ceiling system.

Use plastic folio or other to protect the product during on site construction continually to keep the products in best condition and avoid any scratches.

### 2.8 Where to find additional instructions or technical documentation

In the following chapters we will refer to additional technical documents or/and instructions by a certain keyword written as a link.

You can also find relevant related documents with our Lindab Quick selection tool:

- 1. Visit <u>www.lindQST.com</u>
- 2. Select "documentation finder"
- 3. Select product
- 4. Find relevant document under "Related documents"


### 2.9 Cleaning after assembly/ before commissioning

Please remember to remove plastic folio and other protection material before commissioning and clean the product before hand over.




# Plexus


### 2.10 Packing, unpacking guideline

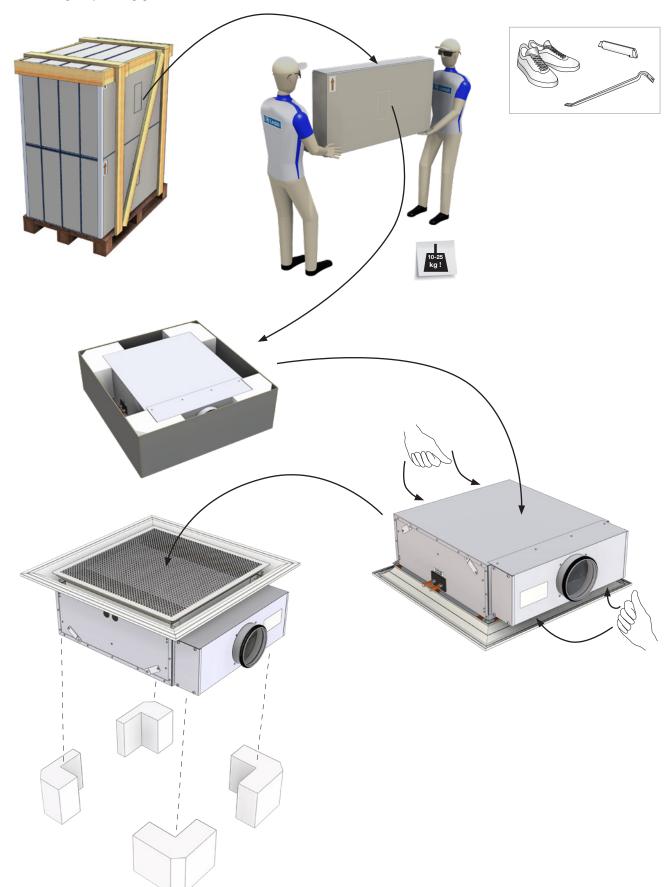


# Plexus

### 2.11 Product labelling

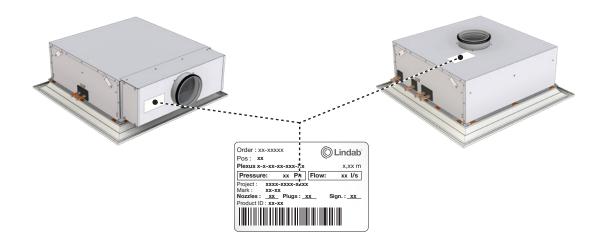

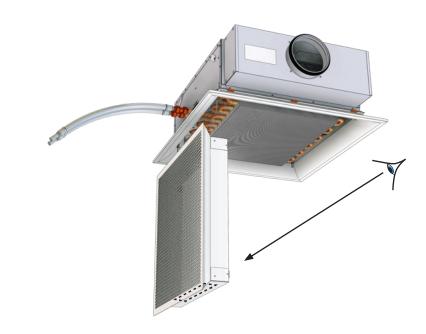


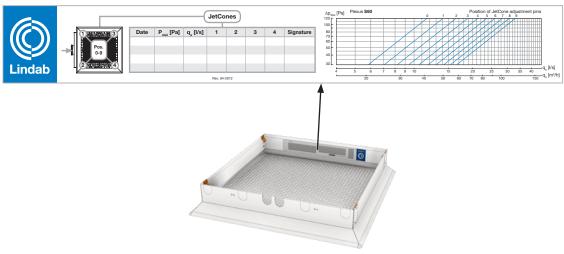



### Plexus

#### 2.12 Order code

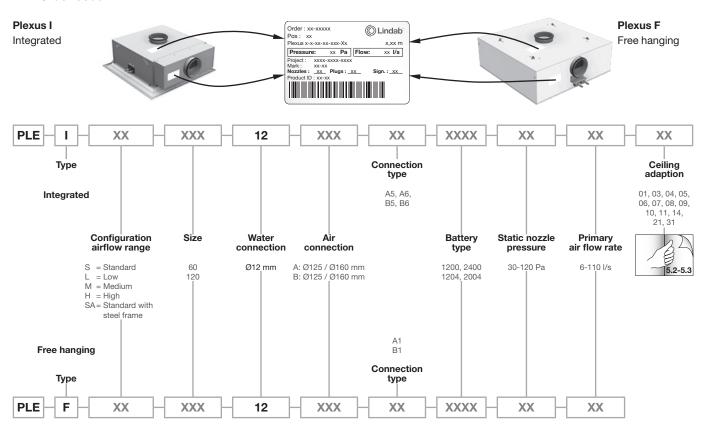

### 2.13 Order code examples



#### 2.14 Label

On the label you will find:

• Order : Order identification number.


Pos : Order position.Product : Product configuration.

• Project : Project name.

Mark
 : Marking noted on order.

• Product ID: Product number.

• Sign : To be signed when checked and commissioned on site.

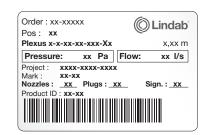



### Plexus

#### 2.15 Contents of order

### Standard package/order contains:

- Beam
- Plus features (pre-installed in factory)
- 4 pc/beam of copper insets (separate in smaller box)
- Accessories (separate in smaller box)

#### 2.16 Plus features

The plus features offer a wide range of combinations with pre-installed accessories integrated into the product on production site. This reduces the installation time on site.

#### 2.16.1 Inlet faceplates


Not relevant for Plexus

### 2.16.2 Outlet front grilles

Not relevant for Plexus

### 2.16.3 Integrated valves








LinFlow-A, angled valve

See LinFlow-A and LinFlow-S for details.

As the product is compact, the valves will come prepared to push-on to the water outlet pipe (enclosed valves). Ready equipped with adapter ring, actuator, cabled to the Regula connect card (if ordered accordingly) and positioned with an adhesive tape near to the piping.

### 2.16.4 Thermoelectric actuators

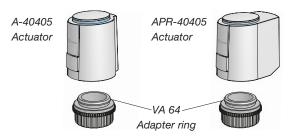

The actuators can be pre-installed on the integrated/ enclosed valves and connected to the integrated Regula connect card/Regula Secura (plus feature). Go to Actuators for details. See also Adapter ring.

### 2.16.5 Integrated Regula components







Condensation sensor and Regula Secura

Regula Multi connect card

Go to Regula for details.

#### 2.16.6 Airguides

Not relevant for Plexus.


#### **2.16.7 Heating**

The product can be equipped with an extra water circuit with 12 mm connections in the battery to provide a heating function (4-pipe connection). See the chapter "Zone heating" in the Plexus data sheet.

#### 2.17 Accessories

Here are some general accessories. For full range and order numbers, see separate Accessories document.

#### 2.17.1 Threaded rod kit (Hangers)



M8 x4 per beam

Go to 5.4 "Preparation for installation on the product" for more details. Order no: See Accessories

### 2.17.2 Flexible hoses



Order no: See Accessories

#### 2.17.3 Transformer



Order no: See Transformers

### 2.17.4 Tectite fittings







Order no: 647690, 884050 and 642623 (12 mm) see Accessories



# Plexus

### 3. Product specification


### 3.1 Product description

The Plexus beam is a  $360^{\circ}$  comfort unit and is standardly prepared for ventilation and cooling (2-Pipe connection). It is available in an integrateable (I 60 / I 120) and an exposed version (F 60 / F 120).


#### 3.2 Dimensions


All dimensions in mm.

### Plexus I 60

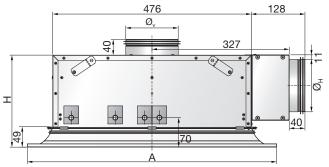

### Plexus I 120

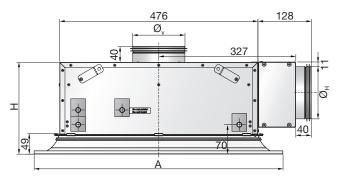


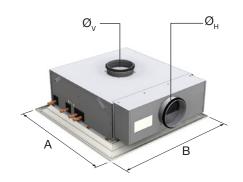



Time	Dimensions [mm]				
Туре	A*	B*	Н	Ø <sub>H</sub>	Ø <sub>v</sub>
I (S/SA) 60	594	594	220	125	125
I (L, M, H) 60	594	594	220	125	160
I (S/SA) 120	594	1194	220	125	160
I (H) 120	594	1194	250	160	N/A

Table 1. Plexus I dimensions.

### Plexus F

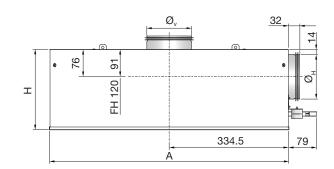

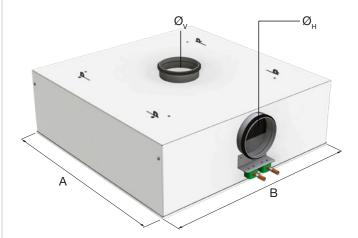

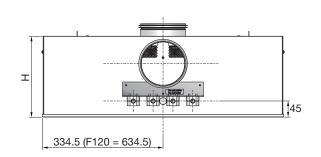

Time	Dimensions [mm]				
Туре	Α	В	Н	Ø <sub>H</sub>	Ø <sub>v</sub>
F (S) 60	669	669	225	125	125
F (L, M, H) 60	669	669	225	125	160
F S 120	669	1269	225	125	160
F H 120	669	1269	255	160	N/A

Table 2. Plexus F dimensions.



<sup>\*</sup> Dimensions A and B depend on ceiling system. See chapter 5.2.1.

### Plexus

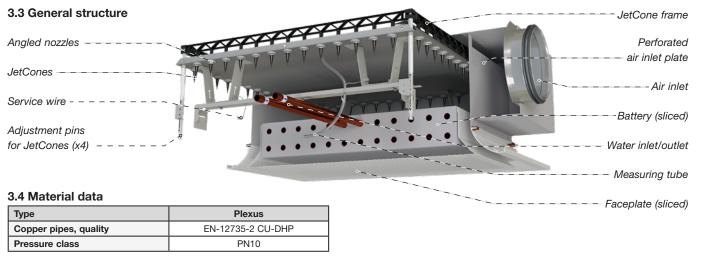


Table 3. Material data.

Туре	Function	Battery type	Water content [1]		
Туре	Function	CC HH	Cooling	Heating	Total
I-60 / F-60	2-pipe	24 00	1.2		1.2
I-60 / F-60	4-pipe	20 04	1.0	0.2	1.2
I-120 / IH-120 / F-120	2-pipe	12 00	1.3		
I-120 / IH-120 / F-120	4-pipe	12 04	1.3	0.4	1.7

Table 4. Water content.

Туре	Function	Dry weight [kg]			
туре	Function	Total			
1-60	2-pipe	11.6			
1-00	4-pipe	11.6			
F-60	2-pipe	17.0			
F-00	4-pipe	17.2			
I-120	2-pipe	18.6			
1-120	4-pipe	20			
F-120	2-pipe	28.9			
F-120	4-pipe	30.3			
IH-120	2-pipe	19.6			
IH-120	4-pipe	21			
FH-120	2-pipe	29.9			
FH-120	4-pipe	31.3			

Table 5. Weight.

### 3.5 Environmental Declarations

Please follow the links below.

- Building product declaration
- Declaration of conformity
- Eurovent certificate

### 3.6 Pressure Class

The waterborne products in Lindab, active chilled beams (battery products), passive chilled beams (battery and strips products), facade units (battery) and radiant panels (strips and panels) are produced according to pressure class PN10 according to EN 1333: 2006.

This means the maximal working pressure for the products at a water temperature of 20°C must not exceed 10 bar.

#### 3.7 Water quality

Lindab recommend water treatment and quality to be according to VDI 2035-2.

- The water preparation and maintenance for the chilled beam water circuit must be handled by a specialist.
- To prevent corrosion, the water circuit must be airtight.
- The water system must also be equipped with aerators to remove any build-up air in the system.
- The water must be oxygen free, to prevent corrosion.
- The water system must be filled with potable water that complies with the "EC directive 98/83/EC".
- pH value of water must be between approximately 6-9 pH.
- The water velocities should not exceed 1m/s, and should be kept as close to the nominal flow as possible to minimize noise and optimize the energy yield.
- Use in-line strainers to remove dirt particles from the water.
- If the water contains any additive inhibitor, then it must be appropriate to use with copper and solder.

### 3.8 Air quality

Primary supply air have to be clean, dry and filtered before reaching the beam.

### 3.9 Capacity test

Lindabs active chilled beams are Eurovent-certified and tested according to EN-15116.

Please visit Plexus on <a href="www.lindQST.com">www.lindQST.com</a> and see <a href="Eurovent">Eurovent</a> for more details.



### Plexus

### 4. Connections

#### 4.1. Water connections

Flow indication arrows are shown on the inlet and return pipes in order to assist the installer.

If the control valves have been ordered separately, a special direction of the flow must be upheld to ensure correct flow through the control valve. Please note the flow direction indicator on the valve to insure correct installation in relation to the desired flow. When connecting a panel or a beam with the piping system either a push-on fitting or a compression coupling should be used. Lindab have tested and recommends John Guest push on fittings as well as push-on fittings from Tectite (available as accessory. See Accessories).


To avoid sound being transported over the beam, we recommend to use our flexible hoses between the piping and the beam connections. See Accessories.

NB! Every control valve can create sound when it is installed directly connected to the water in- or outlet (or into the piping in close distance to the in- or outlet of the water product). To avoid unwanted sound generation we recommend to always use a Lindab control valve <u>LinFlow-A</u> (angled) or <u>LinFlow-S</u> (straight) and calculate the beam with the valve in <u>LindQST\waterborne</u> calculator.

#### 4.1.1 Before installation


- Notice! The connection pipes are internally soft-welded, therefore it is not allowed to solder the beam to the pipes. For other than Lindab fittings and valves, please consult the installation guide for the specific fitting for further details on proper installation
- Both inlet- and return pipes are covered by a plastic or rubber protection cover, which must be removed before installation.




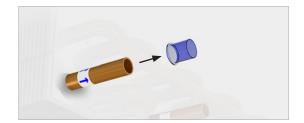

- After removing the protection cover, make sure that the pipe is intact and undamaged, especially at the pipe end, as even small dents and scratches potentially pose a risk of leakage in the system.
- Eventually deburr the pipe ends on the inside and the outside, using a deburring tool before installation.



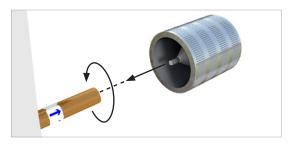

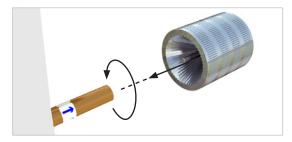


Always remember to do a pressure test after assembly of the pipe work.



### Plexus

#### 4.1.2 Push-on valve

- Mount a push-on valve to the pipe. Make sure the valve has the correct flow direction (see indication arrow on the valve) and that you have the correct valve, when integrated valve has been chosen (see indication on valve or follow cabelling to Regula Connect card). Cooper inserts aren't required!
- Please refer to the suppliers manual.

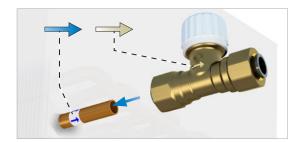



#### 4.1.3 Compression fitting


- While mounting a compression fitting, the pipe will be exposed to a big amount of force, creating a risk of crushing the pipe. To ensure that the pipe won't be crushed when mounting the compression fitting, a copper insert must be inserted into the pipe (always part of the delivery).
- The copper insert should be placed inside the pipe on the beam. Always support the copper pipe coil when inserting the copper insert into position.
- Mount a compression coupling and/or a valve to the pipe. Don't stress the nut too much, since this may crush the pipe.
- Please refer to the suppliers manual.

### 4.1.4 Flexible hoses

- Our flexible hoses with straight ends can be used with both push-on and compression fitting.
- · We recommend to use our flexible hoses with push-on fittings, for easier and faster mounting.
- For the connection to an enclosed valve with integrated push on coupling a flexible hose with straight end (male) or with push on (female) and a short copper pipe can be used.
- · Please refer to the suppliers manual.





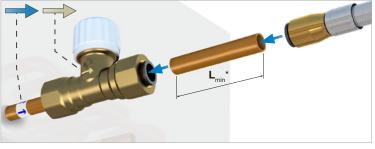



Lindab flexible hoses are available with straight end (male) for direct connection to Lindab valves also.



<sup>\*</sup>  $L_{min}$  = 70 mm (to ensure you can open the couplings again).


### Plexus

### 4.1.5 Possible connections water cooling or heating (2-pipe, standard)

All the Plexus active chilled beams are in the standard version equipped with a so called "2-pipe connection" and contain one water circuit (cooling or heating).

The dimension for all water pipe connections are  $\emptyset$  =12 mm.

### Cooling or heating (standard)

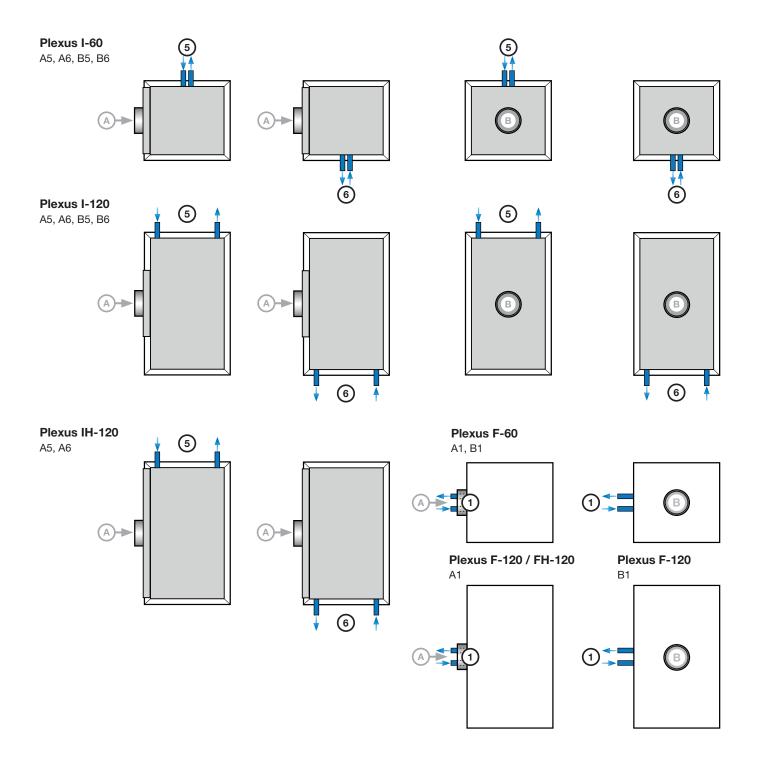

Possible 2-pipe water connections.


### Plexus

### 4.1.6 Possible connections water cooling and heating (4-pipe, Plus feature)

All Plexus' can have a 4-pipe water connection (plus feature), which beside the cooling circuit also includes a heating circuit.

The dimension for all water pipe connections are  $\emptyset = 12$  mm.

### Cooling and heating

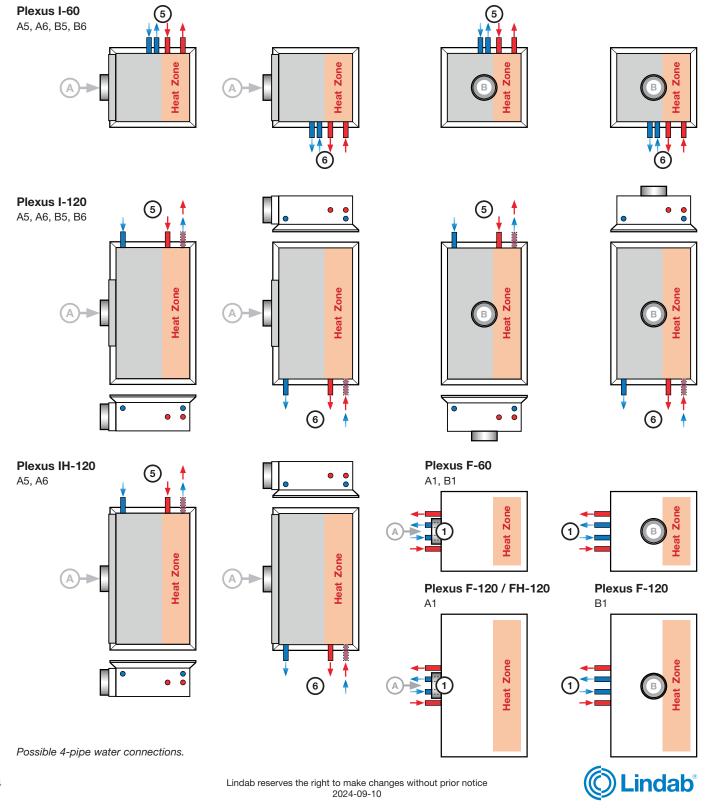


# Plexus

### 4.1.7 Water pipe dimensions and placement


# Plexus I 60 238 327 105 70 17.5

### Plexus I 120

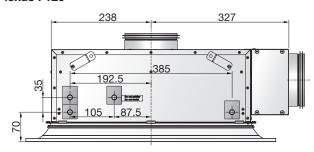




I-60: 2-pipe battery (standard).




I-120: 2-pipe battery (standard).

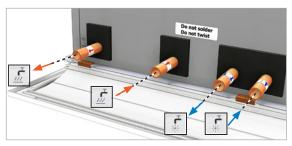


I-60: 4-pipe battery (plus-feature).




I-120: 4-pipe battery (plus-feature).

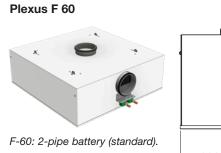

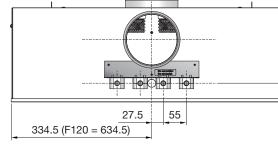



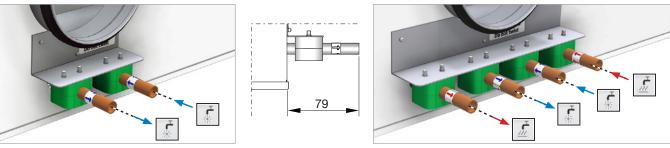

F model: 2-pipe battery (standard).

F model: 4-pipe battery (plus-feature).

### Plexus


### 4.2 Air connections


#### 4.2.1 Air connection installation

The primary air supply must be connected with instructions from a ventilation specialist. Lindab's chilled beams can beneficially be used together with Lindab's Safe® duct systems.

We recommend a flexible duct connection, like Lindab DRATMFU-125/160, to balance out different installation heights or directions between connection and duct and avoid sound will be diverted from piping system to the ceiling.


### 4.2.2 Possible connections supply air

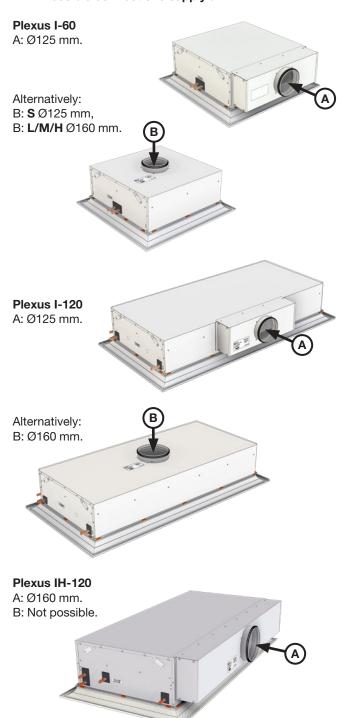

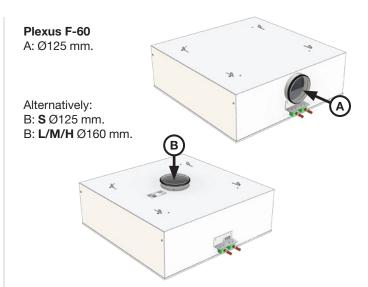



Alternatively: B: Ø160 mm. Plexus FH-120, B: Not possible.

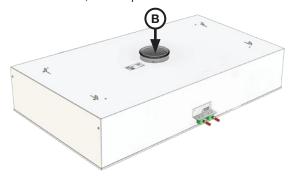

**4.2.3 Possible connections extract air** Not relevant for Plexus

**4.3 Possible combination of connections**See 4.1.5 and 4.1.6 for all possible connections.




### Plexus

#### 4.4 Electrical connections


Electrical connections on the beam are only necessary, when plus features are chosen and thanks to the pre-fabrication it is as easy as "plug and play". The components are always installed near the water-connection at the end of the beam. For further information, see <a href="Regula">Regula</a>.

### 4.4.1 Regula components on the beam

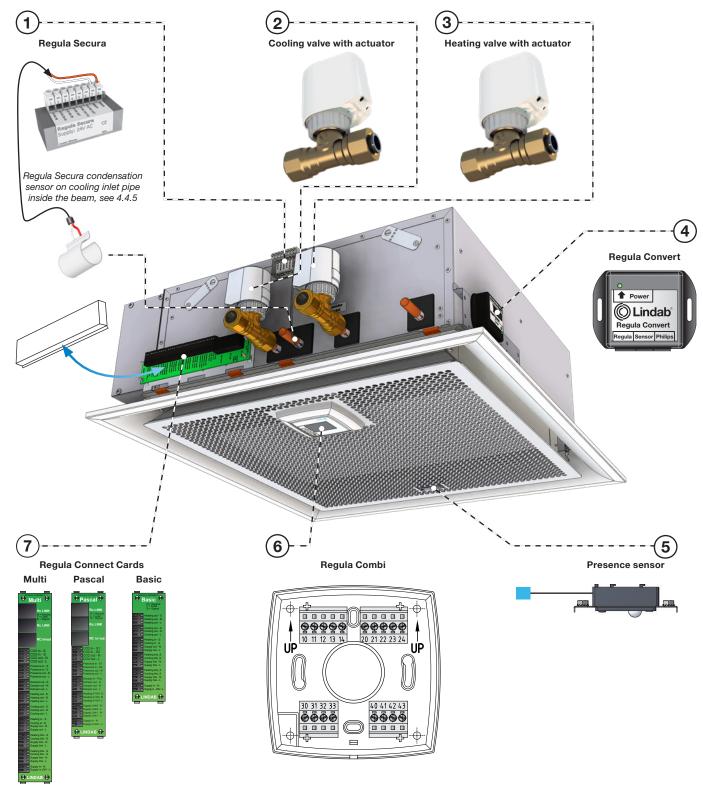

(with protection covers, optional).

### Plexus

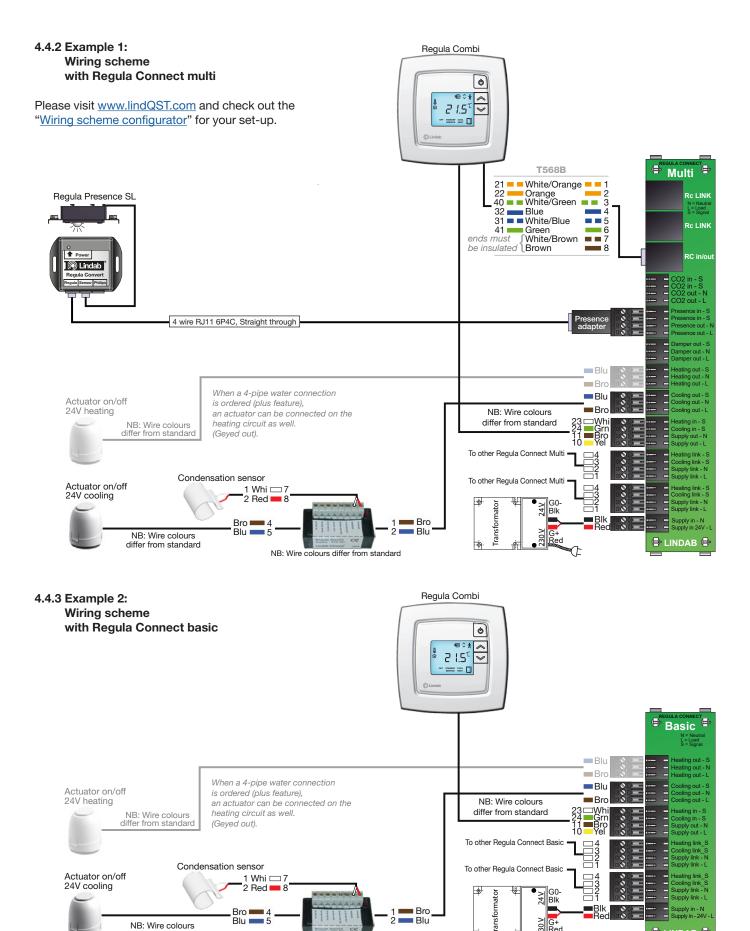



NB: Wire colours differ from standard

### Plexus

### 4.4.4 Regula Connect on the beam

Connect cards are pre-installed when the beam is ordered with PLUS-features.

See Regula Connect for more details.

### **Regula Connect Basic**



### **Regula Connect Pascal**



### Regula Connect Multi




### 4.4.5 Regula Secura on the beam

Regula Secura is pre-installed when the beam is ordered with PLUS-features. See Regula Secura for more details.

### Condensation sensor and Regula Secura



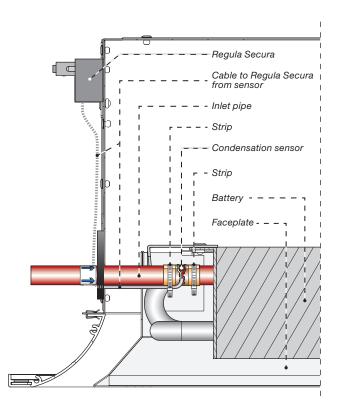

#### 4.4.6 Valves and Actuators on the beam

Description, see 2.16.3 and 2.16.4.

### 4.4.7 Regula Combi on/with the beam

The Regula Combi can be controlled and programmed locally in the display, or at a remote location by a EXOLINE or MODBUS communication system. Handles both 24V and 0-10V devices.



See the <u>Regula Combi</u> documentation.

#### 4.4.8 Actuators

Description, see 2.16.4.

### Plexus


### 5. Installation of product

### 5.1 Handling of product

For the handling of the product please refer to 2.5.

### 5.2 Adaption to ceiling systems

### 5.2.1 Ceiling systems

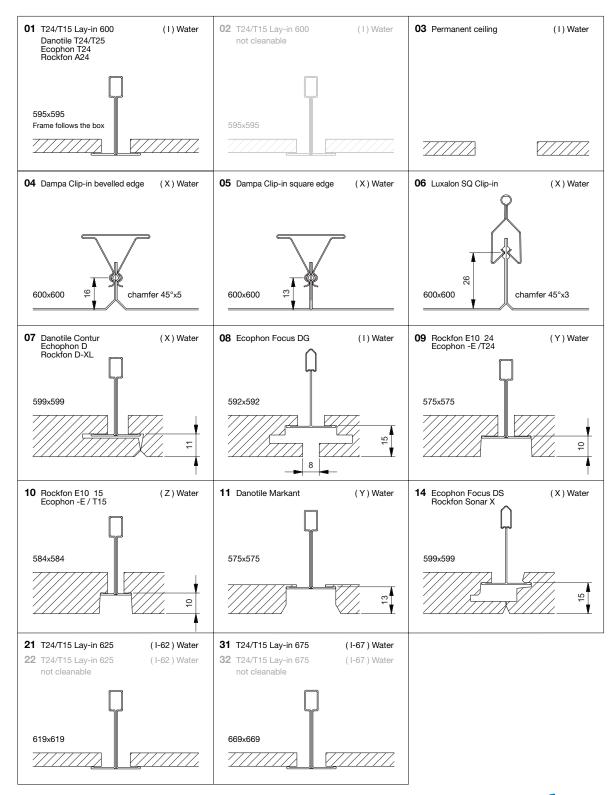




# Plexus

5.2.2 Adaption to ceiling system

Ceilingtype 01, 08, 09, 10, 11, 21, 31, Plexus I (Y, Z)

Plexus I		(S/SA, L, M, H) 60	(S/SA, H) 120	01, 08
Plexus I		(S, L, M, H) 62	(S, H) 120	21
Plexus I		(S, L, M, H) 67		31
Plexus I	(Y)	(S, L, M, H) 60	(S, H) 120	09, 11
Plexus I	(Z)	(S, L, M, H) 60	(S, H) 120	10

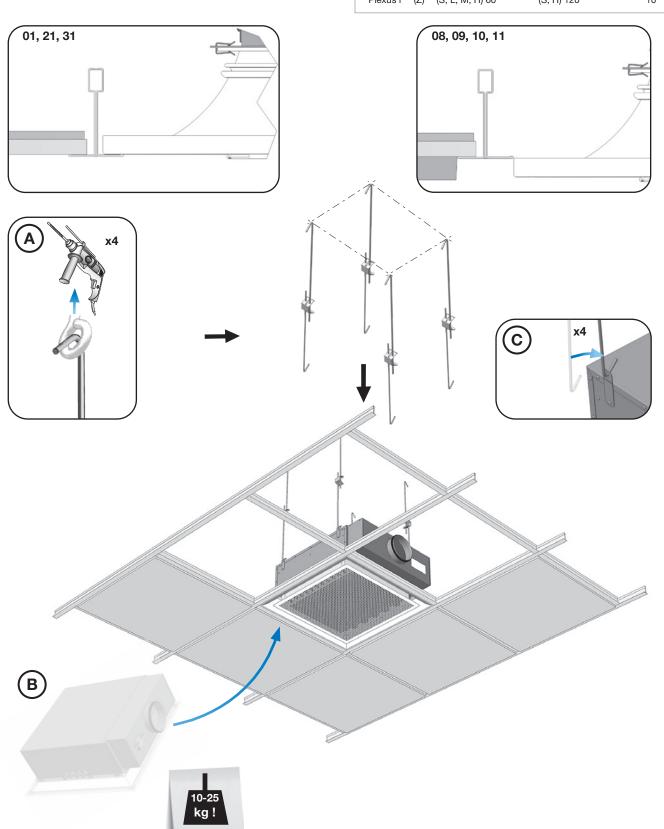

# Plexus

### Ceilingtype 03, Permanent ceiling, Plexus I

 Cutout dimensions in permanent ceiling:


 Plexus I (S/SA, L, M, H) 60
 = 544 x 544 mm

 Plexus I (S/SA, H) 120
 = 544 x 1144 mm

 Plexus I-62 (S, L, M, H)
 = 569 x 569 mm

 Plexus I-67 (S, L, M, H)
 = 619 x 619 mm


 Plexus I (S/SA, L, M, H) 60 Plexus I (S/SA, H) 120 Plexus I-62 (S, L, M, H)

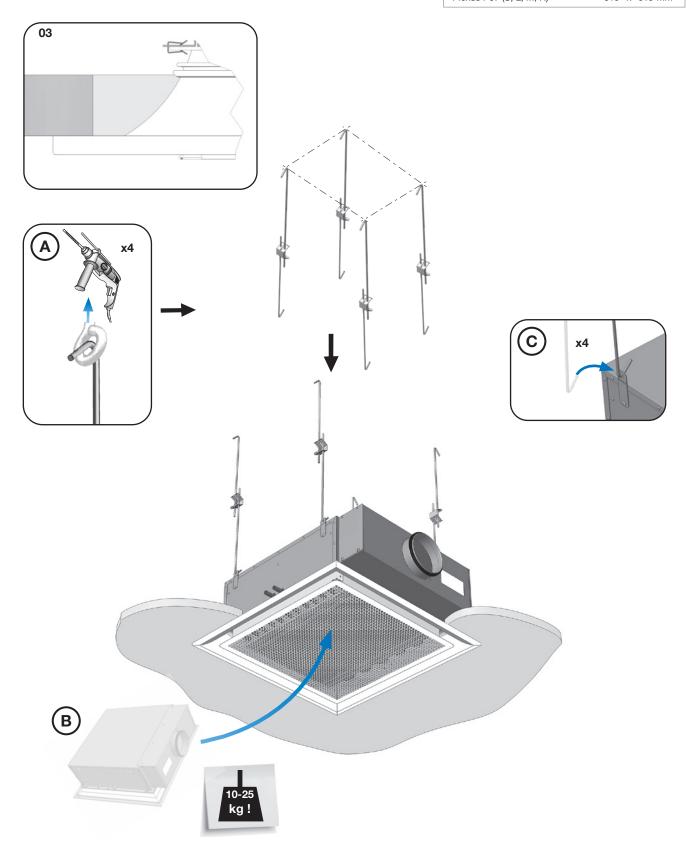




# Plexus

Ceilingtype 04, 05, 06, 07, 14, Plexus I (X)

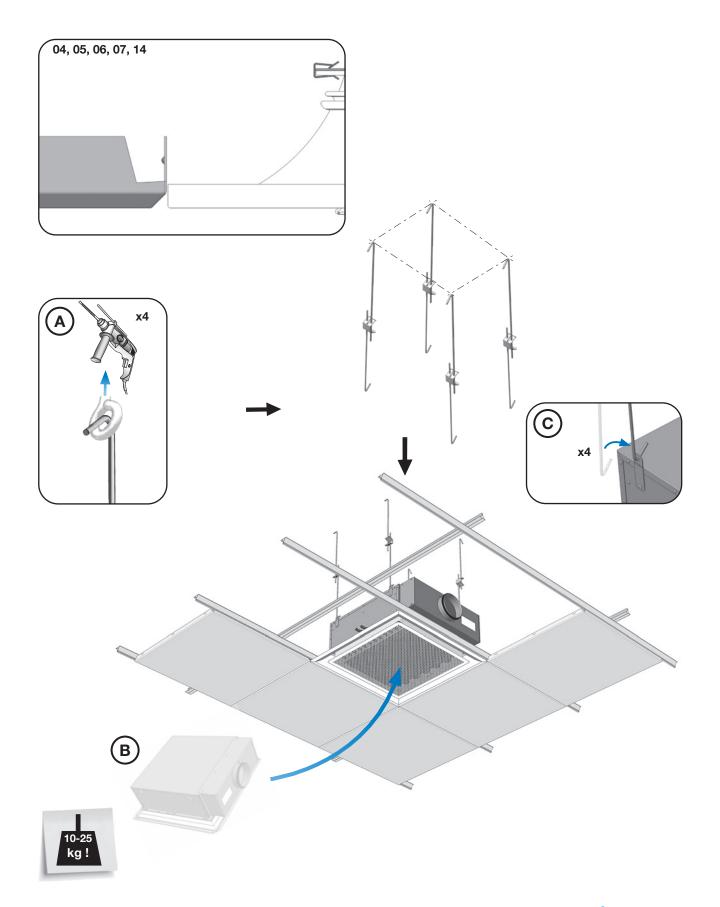

# Plexus

### Freehanging, exposed, Plexus F

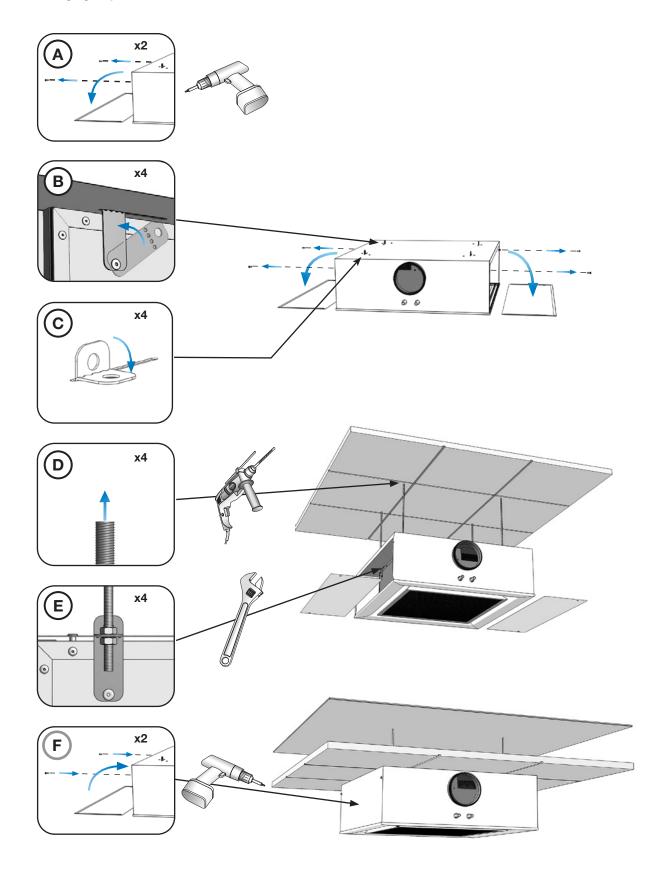





### Plexus

### 5.3 General installation principles


### 5.3.1 Recessed in suspended T-bar ceiling

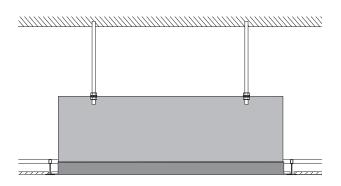


### 5.3.4 Free hanging above perforated or egg-crate ceiling

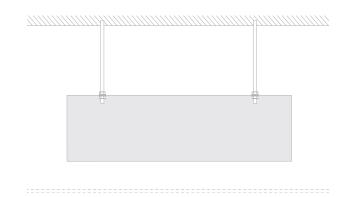


### 5.3.2 Exposed, sealed to the ceiling




### 5.3.5 Recessed in suspended (permanent) ceiling

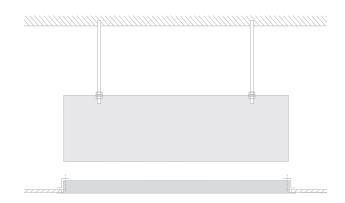

### 5.3.3 Exposed, free hanging

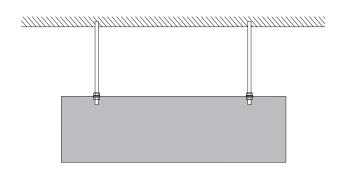

### 5.3.6 Recessed in suspended (permanent) ceiling without cover flanges

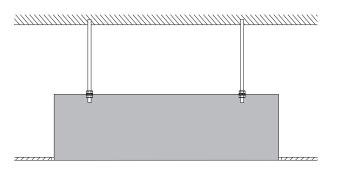

### Plexus


### 5.4 Preparation for installation on the product


The beam is prepared for installation by hangers (4 x per beam). 4 turnable/bendable brackets on the Plexus' models ensures the possibility to use different hanger systems.

1. Threaded rods M8 Plexus 60 : 371 x 497 mm Plexus 120 : 371 x 1097 mm


2. Pendulum hangers (in different sizes) : 371 x 477 mm : 371 x 1077 mm


3. Wiring hanger system : 371 x 477 mm : 371 x 1077 mm

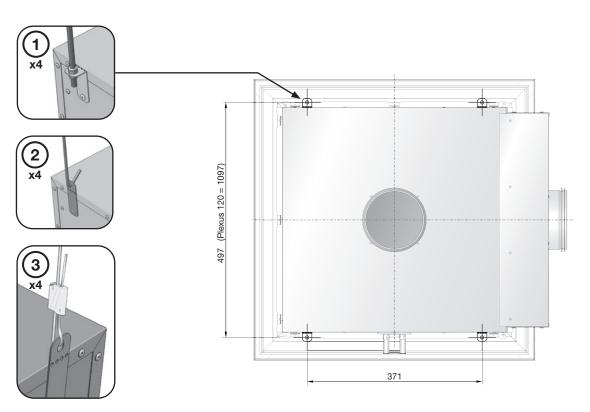

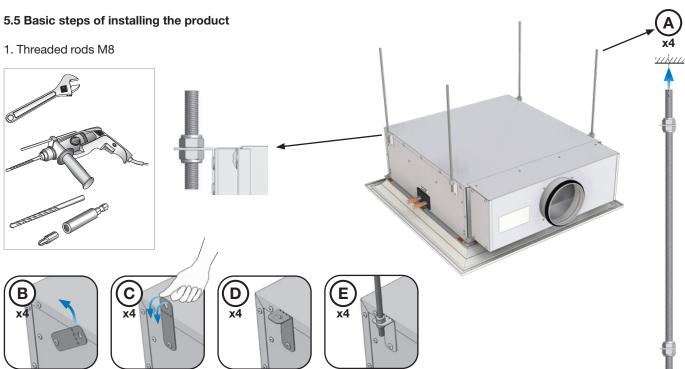

# Plexus

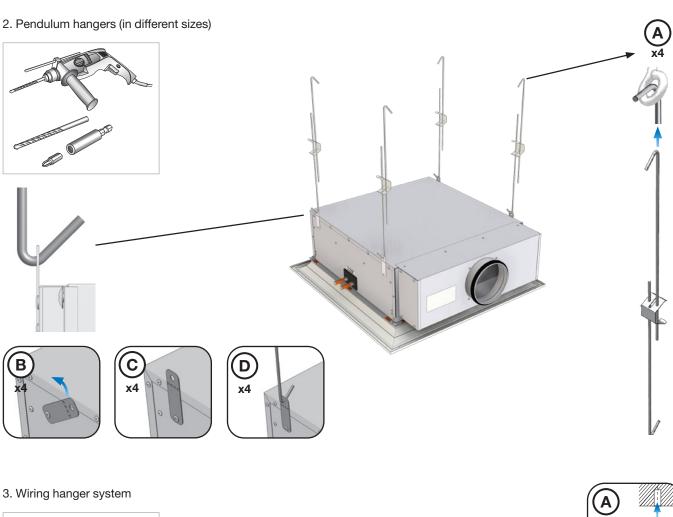

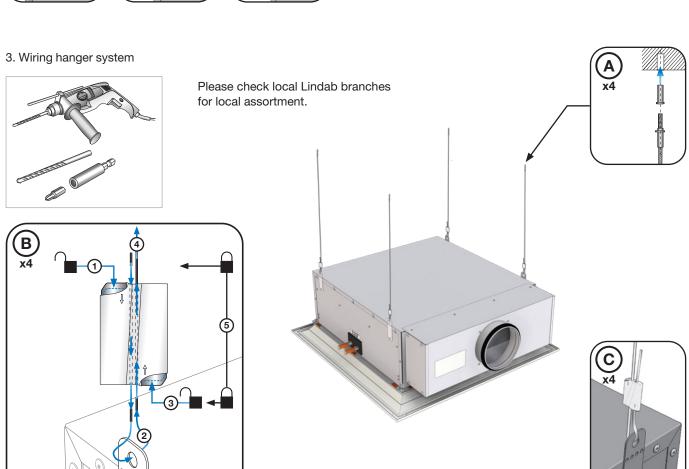

### Plexus


### 6. Adjustment and commissioning

### 6.1 Airflow and pressure


The JetCone System enables an easy and fast adjustment in both pressure and air volume (primary airflow rate) through the front side.

### 6.1.1 Jetcone adjustment pins


Plexus I-60 seen from below with faceplate of, showing the adjustment pin versions in plastic and aluminium.

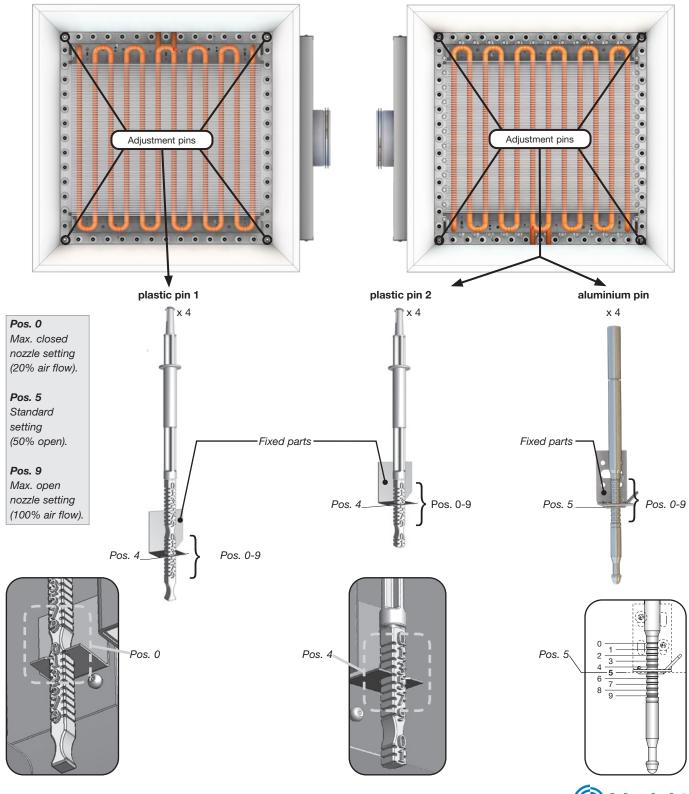

### Plexus

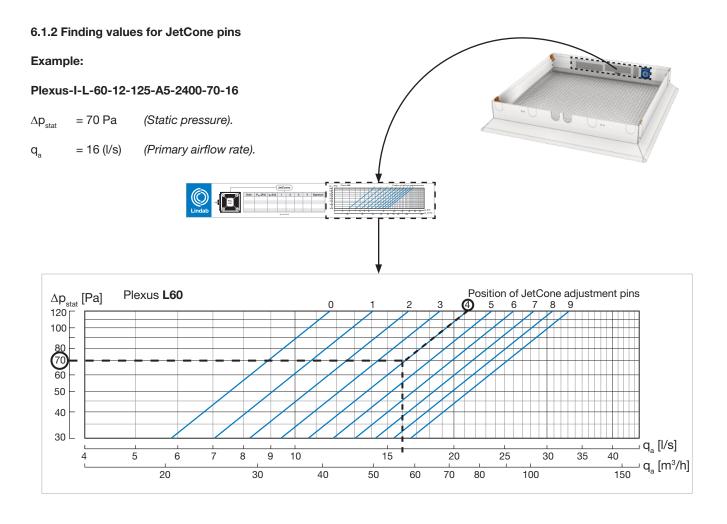

### 6.1.3 Adjusting air flow and pressure with JetCone pins

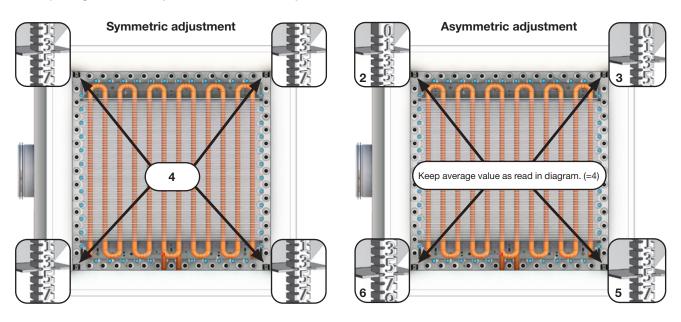

### Plexus

#### 6.2 Adjustment of air distribution profile


Plexus comes as standard (S) with fixed angled JetCone Nozzles, which provide 360° optimal air distribution.

### 6.3 Measuring air pressure and calculating the air flow

Before calculating the airflow, the static nozzle pressure must first be measured. The static nozzle pressure is the air pressure available at the nozzles.

#### 6.3.1 Measuring static nozzle pressure and air pressure

- To measure the air pressure, a manometer, (analogue or digital) will be needed. Lindab recommends PC410.
- Insert the measuring tube onto the specialized measuring nozzle.
- Read of the static nozzle pressure from the manometer (PC410).

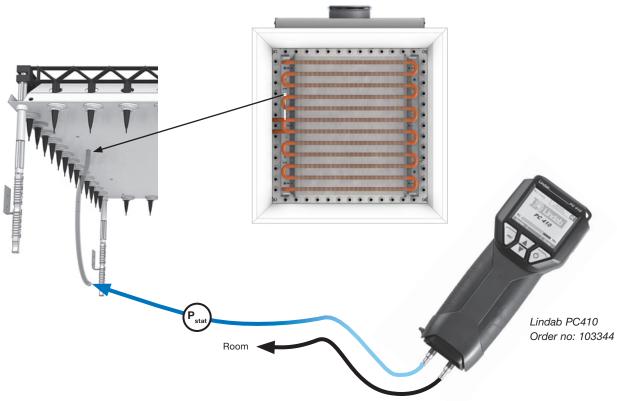

### 6.3.2 Calculating the actual air flow

- After measuring the static pressure, read the settings of the four JetCone adjustment pins to find the mean value of the pins.
- Locate the diagram inside the openable perforated faceplate, (also see next page), and use the static nozzle pressure and the mean value of the pins to find the current airflow.

### 6.3.3 Changing the actual air flow

- Measure the static nozzle pressure.
- · Locate the air pressure/airflow diagram inside the openable perforated faceplate. (Also see diagrams on next page).
- Find the mean value of the 4 pins to reach the desired airflow, in the diagram. Use the static nozzle pressure and the desired airflow to find the mean value of the 4 pins.
- Adjust the 4 pins in the Plexus, so the mean value of the pins will correspond with the mean value found in the diagram.
- See example in 6.1.3, asymmetric pin setting: 2 + 3 + 5 + 6 = 16/4 = 4. (Where (4) was the value read in diagram).


#### 6.3.4 Changing the air distribution profile


See 6.1.3.





### Plexus

### 6.3.5 Plexus pressure / airflow diagrams

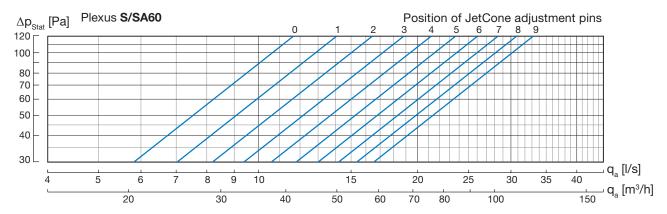


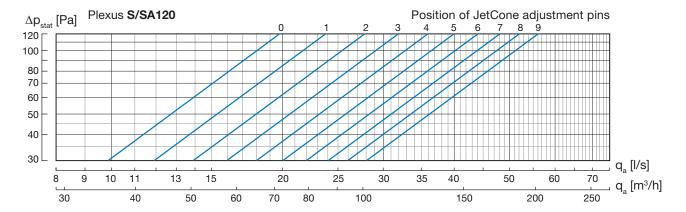


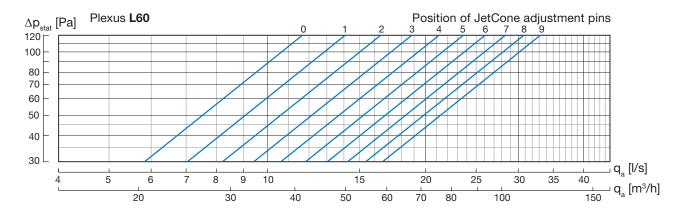

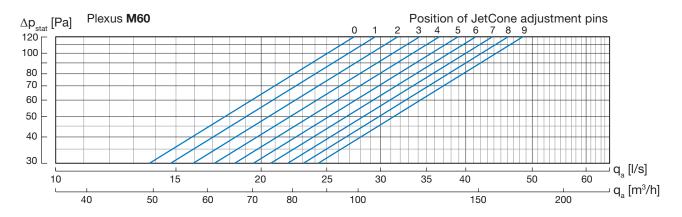

### Plexus

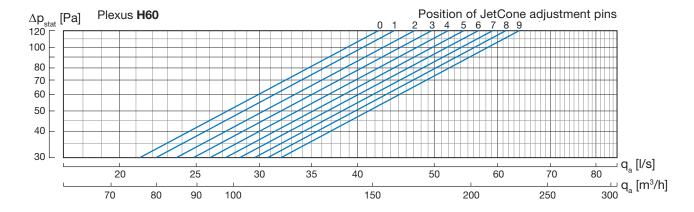

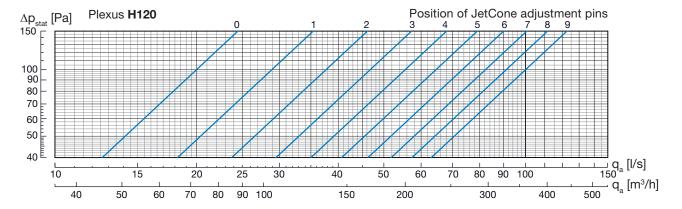

#### 6.4 Water flow rate

### 6.4.1 Pre-setting of valves

All the integrated control valves (plus feature) are delivered not set. The presetting has to be done on site. For the presetting of valves, please see <u>LinFlow-A</u> (Angled) and <u>LinFlow-S</u> (Straight) water valves documentation.

#### 6.4.2 Balancing strategy

Lindab recommends always balancing the water system to guarantee thermal comfort in all areas, to avoid noise nuisance problems and to safe energy. A hydraulic balance is obvious to ensure that all the beams (panels or facade units) in the system will always be supplied with their required (planned) water flow rates (calculated with <u>LindQST\waterborne calculator</u>).

Lindab refers to the proportional method, where all beams (panels or facade units) are balanced to the same proportion of the requested water flow rate.




### Plexus

### 7. Maintenance

The interval of cleaning depends on the indoor environment where the beam is placed. Under optimal conditions the beams only need cleaning every 5 years.

- Open the inlet plate using no tools (7.2)
- Clean the battery downside and the inlet faceplate inner parts with a dust cleaner / vacuum cleaner.
- Only use lukewarm water and a mild detergent and a piece of wet cloth to clean the inlet face plate.
- Open the inspection hatch (7.3)
- Clean the air plenum chamber and air connection with a vacuum cleaner
- Lower battery if water pipe connections are connected to system by flexhoses. (Otherwise this is not possible, See 7.4).
- Clean the top side of the battery, nozzle plate, JetCones and the mixing chamber with a dust cleaner / vacuum cleaner.


### **7.1 Remove the outlet front grille** Not relevant for Plexus.

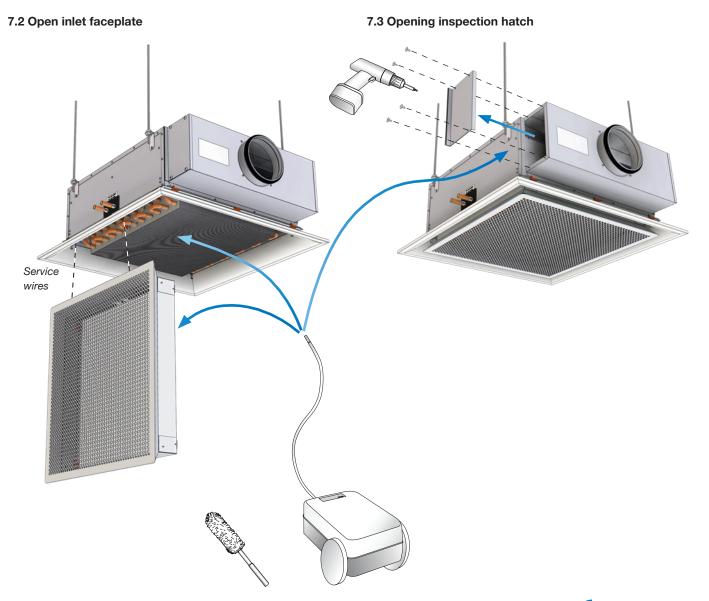


### Plexus

### 7.4 Lower battery

Battery can only be lowered when the plus feature "dropdown battery" is ordered. This plus feature is only available for Plexus-I models and not in combination with any other plus features integrated in the front plate (e.g. Regula Combi or/and presence sensors!)

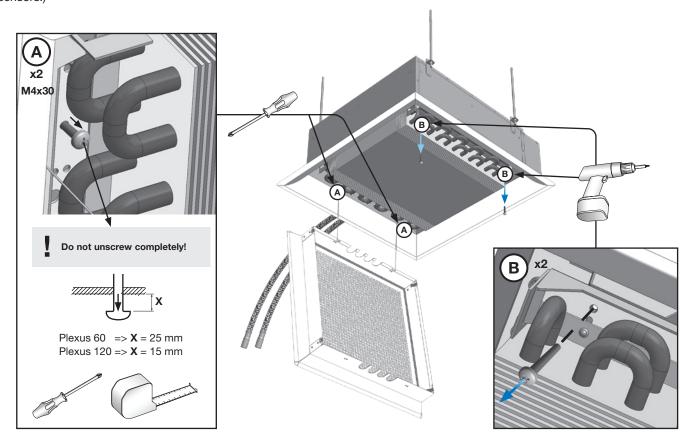

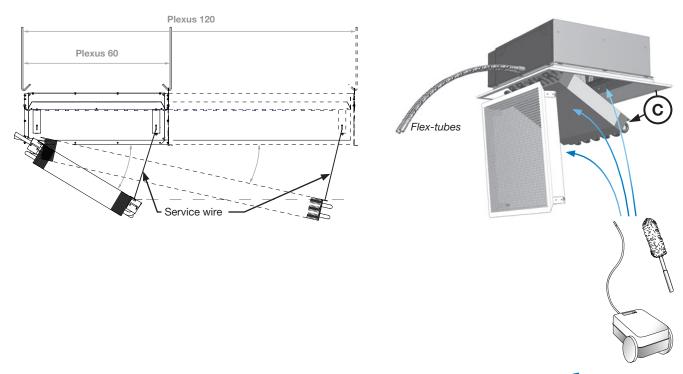




# Plexus

### 7.5 Turnable battery

The water battery can be turned easily on site to change e.g. water connection (A5) to (A6) or vice versa (only available for 2-pipe connections and models without plus features).

Re-use pipe-covers (C) and plastic plugs (H).


Lindab recommends to change battery before installation in ceiling.

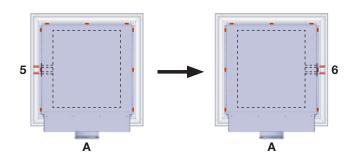



### 1. Take battery out of A5

A - Un-Click and open faceplate.

- **B** Release service wires (x2) and remove faceplate.
- C Gently remove pipe covers for re-use (x2).
- **D** Unscrew battery (x4) and carefully tilt it slightly upwards.
- **E** Free measuring tube (x1) from pipe-loops and gently release it from battery-bracket hole.
- F Take battery out.
- **G** Release faceplate service wires from brackets inside beam. To be reused (x2).

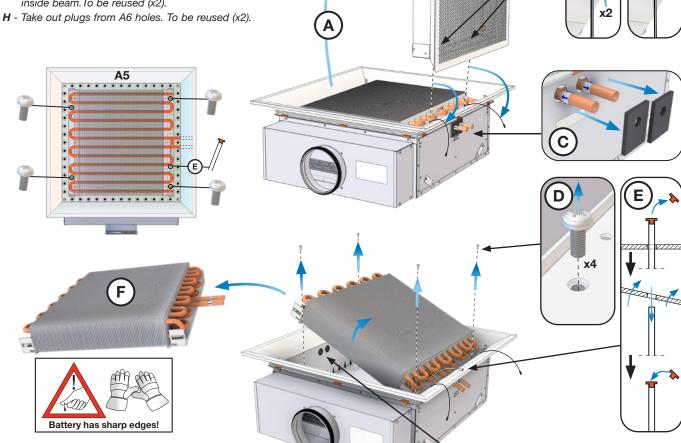

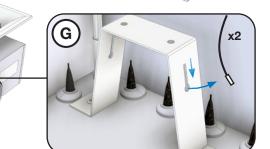

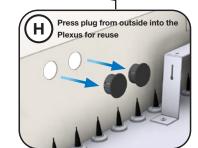

### Plexus

# 2. Reinstall battery as an A6 model Plug must be flush with A - Reattach faceplate service wires (x2) to brackets in A6 side inside wall. Insert from the inside inside beam. **B** - Reinsert plugs (x2) in A5 pipe-holes. C - Rotate battery 180 degrees and gently reinsert with inlet/ outlet pipes first into A6 pipe holes. **D** - While inserting and lowering battery, the measuring tube (x1) must be reinserted through correct hole in battery E - Now lower battery into position and lock it with the 4 screws (x4). F - Gently re-insert pipe covers onthe inlet/outlet pipes G - Arrange measuring tube around pipe loops so it will not dangle and touch faceplate when installed. H - Mirror faceplate (from A5 position) so it will fit A6 configuration and reattach faceplate service wires to faceplate. The faceplate can now be closed and clicked on. **A6** Battery has sharp edges! Do not glue! Press against side.

# Plexus

### 8. Accessories

Ask Lindab for the accessories mentioned in this document. Additional accessories (or additional dimensions) are available on request.\*\*

Order code	Order number
2-way Control valve LinFlow-S-12 straight - push on	686552
2-way Control valve LinFlow-A-12 angled - push on	686554
4 pcs Threaded rod M8 -100mm + 4 pcs z-brackets + 16 pcs screw nuts	on request
4 pcs Threaded rod M8 -500mm + 4 pcs z-brackets + 16 pcs screw nuts	on request
4 pcs Threaded rod M8 -1000mm + 4 pcs z-brackets + 16 pcs screw nuts	on request
Actuator A 40405 24 V on/off NC - 1m, non-halogen cable	684601
Actuator A 41405 24 V on/off NO - 1m, non-halogen cable	684603
Actuator APR 40405 0-10 V mod. NC, 1m, non-halogen cable	684667
Actuator APR 40405 0-10 V mod. NC, 1m, cable	684604
Adapter VA64 M28x1,5	686565
Aerator 12mm - tectite	647690
Ballofix Broen 12 mm with handle - shut-off valve	642663
Ballofix Broen 12 mm without handle - shut-off valve	642662
Copper insert 12 x 1,0 mm	884022
Flexible hose O2stopp_DN10 0,4m - JG12 push - JG12 push	686566
Flexible hose O2stopp_DN10 0,4m - JG12 push - straight end 12 mm	175984
LinCon -12 -15 Water connection set	179040
Lindab PC 410	103344
Regula Combi see: "Accessories"	**
Regula Connect Card Basic	*/**
Regula Connect Card Multi	*/**
Regula Secura	**
Tectite angle 12 mm	884014
Tectite straight 12 mm	884050
Tectite demounting tool 12 mm	884087
Tectite demounting tool 12 mm, small	646881
Touch-up paint RAL 9003 - 25 ml	174759
Touch-up paint RAL 9010 - 25 ml	642531
Transformer 24V AC output	*/**

Table 6. Accessories



<sup>\*</sup> see: "Regula Connect - What do I get?"

<sup>\*\*</sup> see: "Accessories"





Most of us spend the majority of our time indoors. Indoor climate is crucial to how we feel, how productive we are and if we stay healthy.

We at Lindab have therefore made it our most important objective to contribute to an indoor climate that improves people's lives. We do this by developing energy-efficient ventilation solutions and durable building products. We also aim to contribute to a better climate for our planet by working in a way that is sustainable for both people and the environment.

Lindab | For a better climate

